

 
Congratulations on your purchase of the Pazzles™ Pro Creative Cutter™! This Set Up Guide will help you set up the Pro and install the Funtime software. Give yourself at least 30-60 minutes to set up your machine. For additional information about use of your machine and software, please refer to your Manual. You can also visit us online at [www.pazzles.com](http://www.pazzles.com) to get the latest tips.

1. When you first open your package, check to make sure everything is in the box. Please check the box thoroughly as some items are located underneath or beside the machine. If you are missing any items, please contact Pazzles immediately at 1-866-PAZZLES for a replacement. Your box should include:

A.



B.

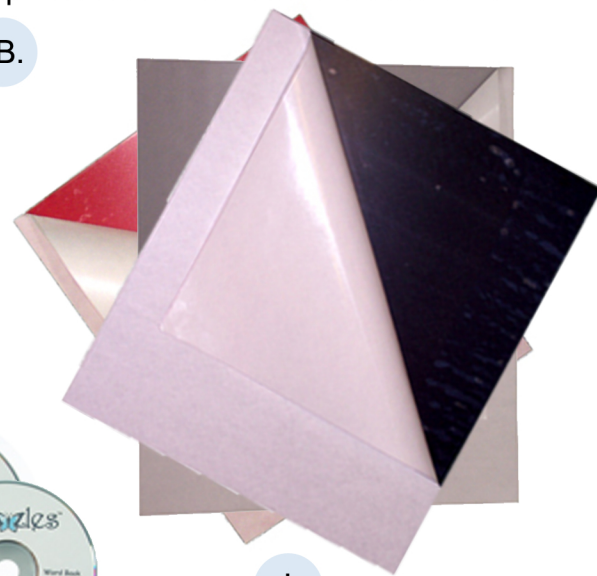

C.



D.



E.



F.




G.



H.



I.

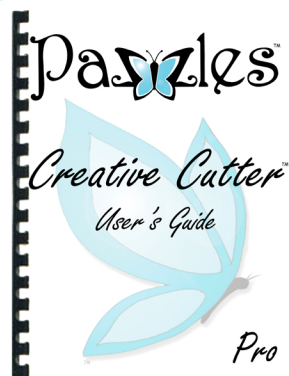

A. Pro Machine

B. Cutting Mat (black)

Embossing/Piercing Mat (grey)

Fabric Mat (red)

C. Blade Holder with installed blade

D. Pro Addition CD and Basic Tutorial CD

E. Power Cord

F. Serial Cord

G. Pen tool

H. Tool Kit

I. Pro Instruction Manual

J. Two acrylic trays and hardware

K. Funtime Scrapbooking Deluxe software

L. Two vinyl blades (not pictured)

J.



K.



 
 
 
2. Insert the Funtime Scrapbooking Deluxe™ Software CD into your CD-rom.
3. The installation program should start automatically. If it does not, select “Start” from the bottom left corner of your screen and choose “My Computer”. Locate the CD-ROM drive that contains the Funtime Scrapbooking Deluxe™ Software and double-click it.



4. The Installation Screen should appear, select “Install Funtime”.
5. A new menu will appear, read the information about your USB key and then select “Install Funtime”.
6. Follow the instructions in the Install Shield Wizard that appears on your screen.
7. When installation is complete you will be asked to register your software. You may also wish to register at [www.pazzles.com](http://www.pazzles.com) to receive access to forums, newsletters, free images and more!

8. The Funtime Scrapbooking Deluxe™ icon should appear on your desktop. Double click the icon to open the Funtime Scrapbooking Deluxe™ software. You will need to have your usb key installed.

9. Remove the packing material from the Creative Cutter Pro™ and place it on a hard, flat, sturdy surface with at least 18” of clear space behind and in front of it.

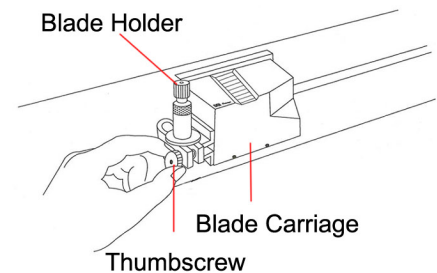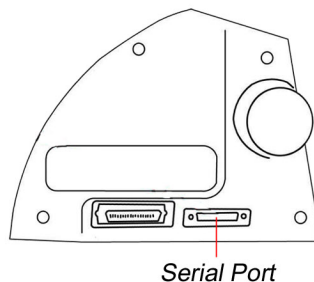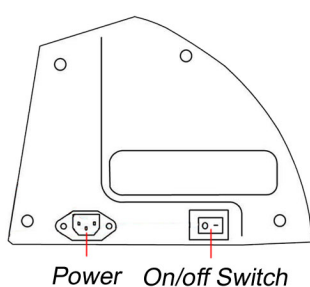

10. Plug in the power cord. Connect the power cord to the Creative Cutter Pro™ and then to an outlet.
12. Connect the serial cord. First connect the wider end of the cord to the Creative Cutter Pro™ and then the shorter end to your computer’s serial port. If your computer does not have a serial port you will need to purchase a USB to Serial converter. These cords are available through Pazzles or at any major electronics store. Do NOT purchase a USB to Parallel converter.
13. You now need to set up the ports for you Pro. Go to your start menu and right click on “My Computer” and select “Manage”. Then click the “Device Manager” and click “Ports” to view a list of ports. Look for a USB to Serial or a Serial port (depending on how you are connected) and note the number of the port. Now open your Funtime software and select “Plotter Codes” from the “Settings” drop down menu. Select “Add/Remove” and add the Creative Cutter Pro and remove any other cutter. Select “Ok”. Then select the port number from the “Port” drop down menu. Select “Accept/Save”.
14. Insert the Blade Holder as illustrated above. The blade depth has already been set for you, please do not change it.
15. Install the tray and hardware according to the instructions included with the hardware. Please note that the trays have a protective brown covering on them that is removable.